 


Display case for LEGO® set 72046

 
1

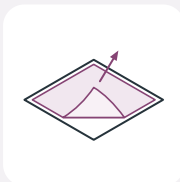

CHECK FOR FILM

Protective film may be present. It can be clear or coloured. Check both sides and remove any film before assembly.

2

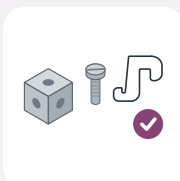

CHECK YOUR PARTS

Match all the pieces to the parts sheet before you start.

3



GENTLE TIGHTENING

Slotted (flat-head) hand screwdriver, not included. A screwdriver head that snugly fits the screw head makes assembly easier than an ill-fitting one. Do not over-tighten.

 
4



FOLLOW THE PURPLE

Purple shows the part being added or featured in the step.

5

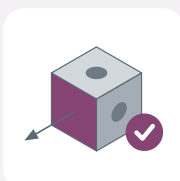

SMOOTH FACE FORWARD

The four cubes at the front of the case must have their smooth, hole-free side facing the front panel.


BEFORE YOU START

- Printed panels: remove protective film if present. Do not peel or scrape the printed artwork. **The colour side faces forward.**
- Peeling tip: if film is present, lift a corner with a fingernail and peel slowly. Do not use sharp tools.
- Part labels match the parts sheet; letters show the step order. Artwork colours are simplified in the drawings.


CHECK YOUR PARTS



 
Part 1
Lid
1x

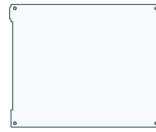


Part 2
Front panel
1x

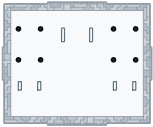 

Part 3
Printed border
1x

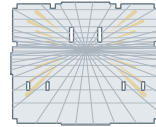 

Part 4
Printed grid
1x

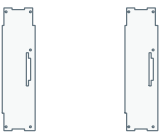 


Part 5
Sides: use either
2x



Part 6
Clear bottom
1x



 Part 7
Black base
1x

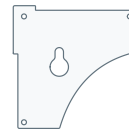

Part 8
Rear wall mount A
1x



Part 9
Rear wall mount B
1x




Part 10
LEGO® holder crossbar
1x




Part 11
LEGO® holder stem
2x



 Part 12
Game card insert hooks
4x



Part 13
Slotted screws
26x

 

Part 14
Silver cubes
12x



Part 15
Corner feet
4x

Parts 8 / 9 are a mirror pair.

Magnets, including all four in the front panel, and LEGO® studs are already fitted. Leave them in place.

 
NINTH PANEL ASSEMBLY

A




Fit feet to the face WITHOUT the white outline. Keep the four large holes clear.

B

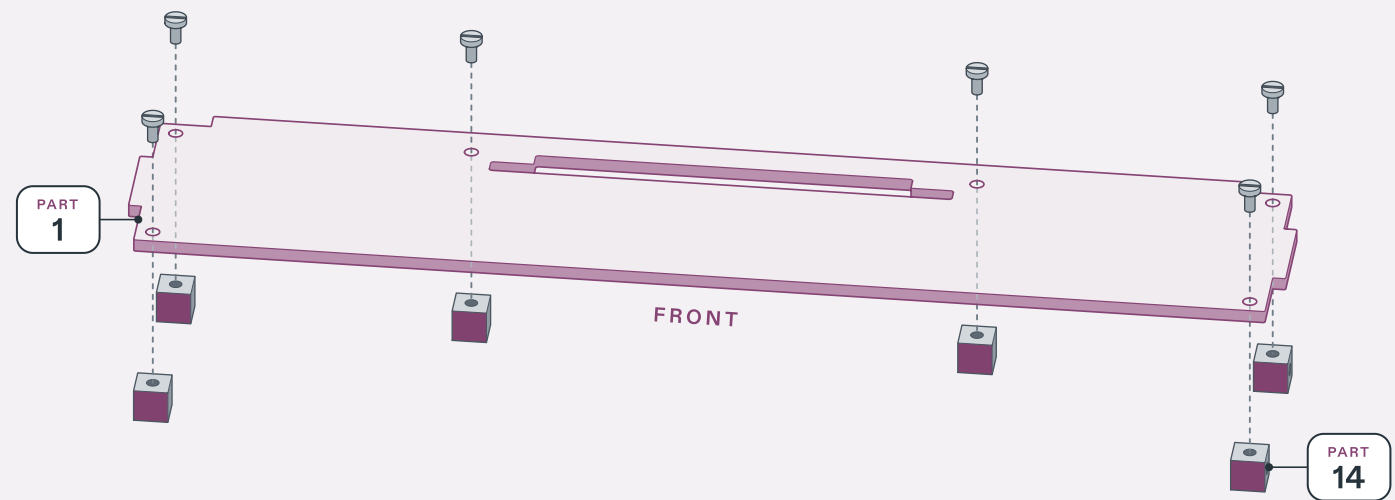

Part 14

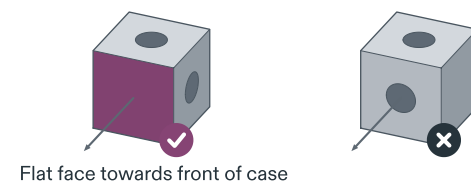 


2x


Part 1



 C

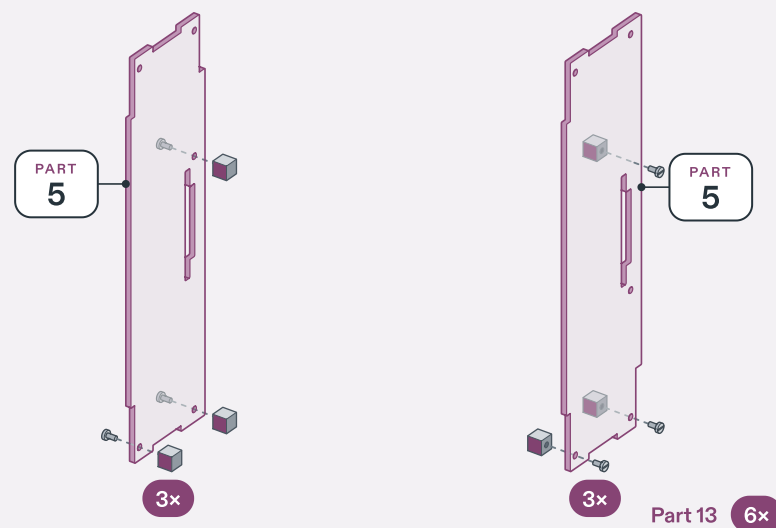


Part 14

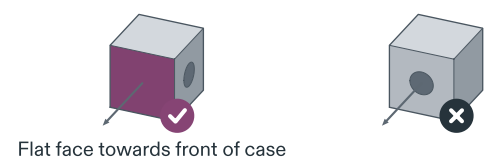 


2x

 D

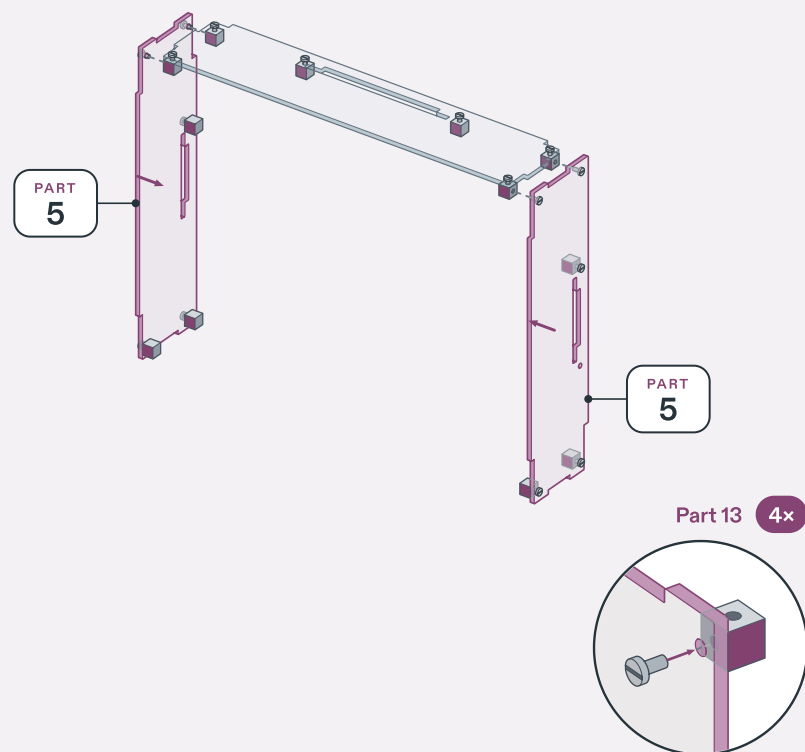


E

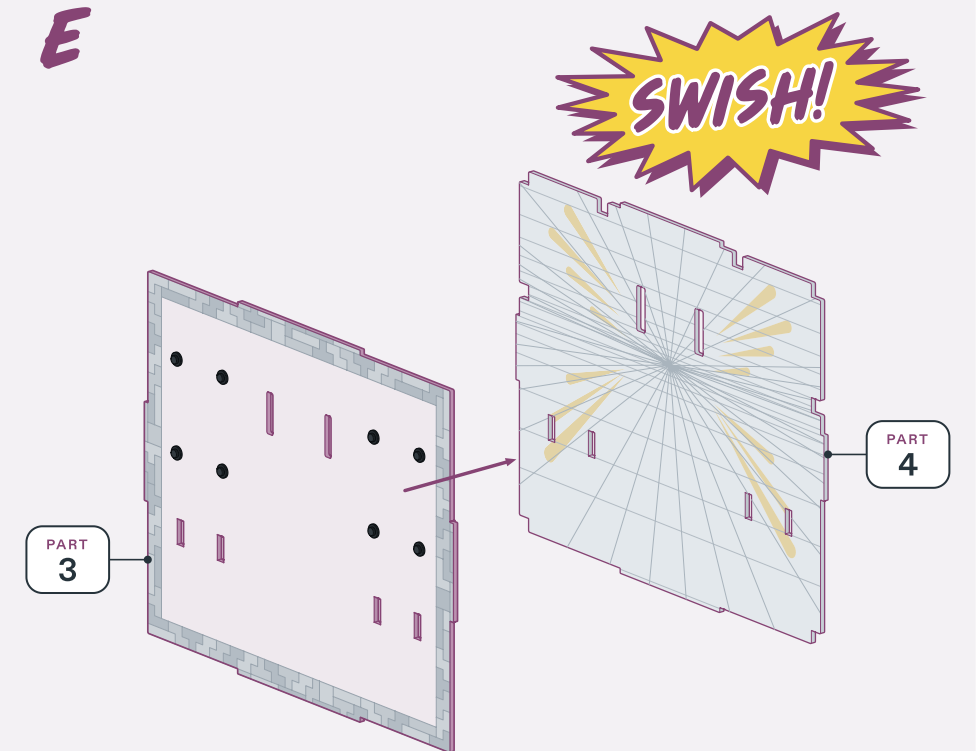 


NINTH PANEL ASSEMBLY

 F

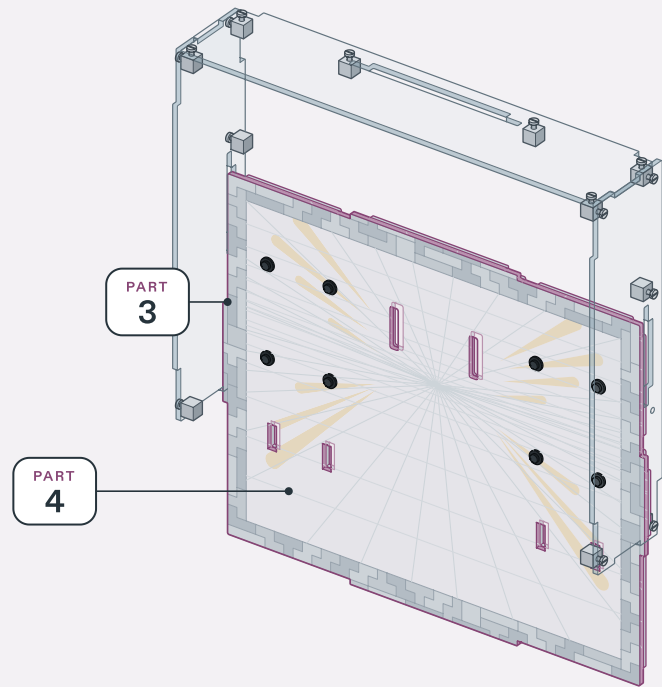


G

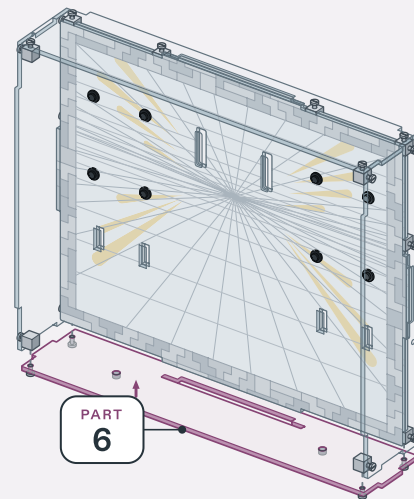 

Part 13 4x

 
H

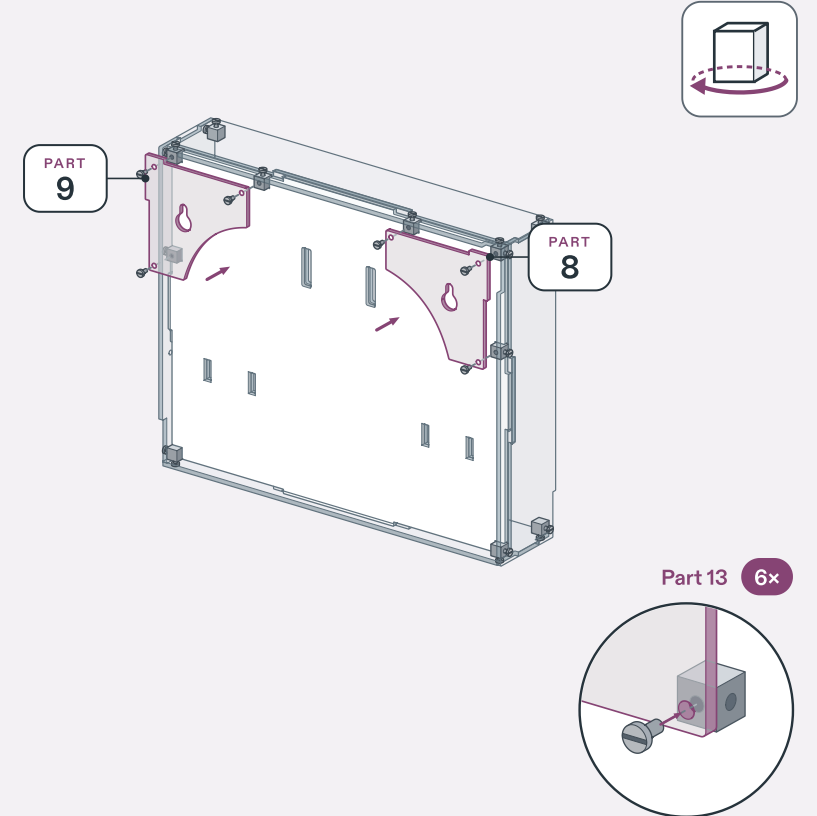


Part 13 6x

I

 POW!

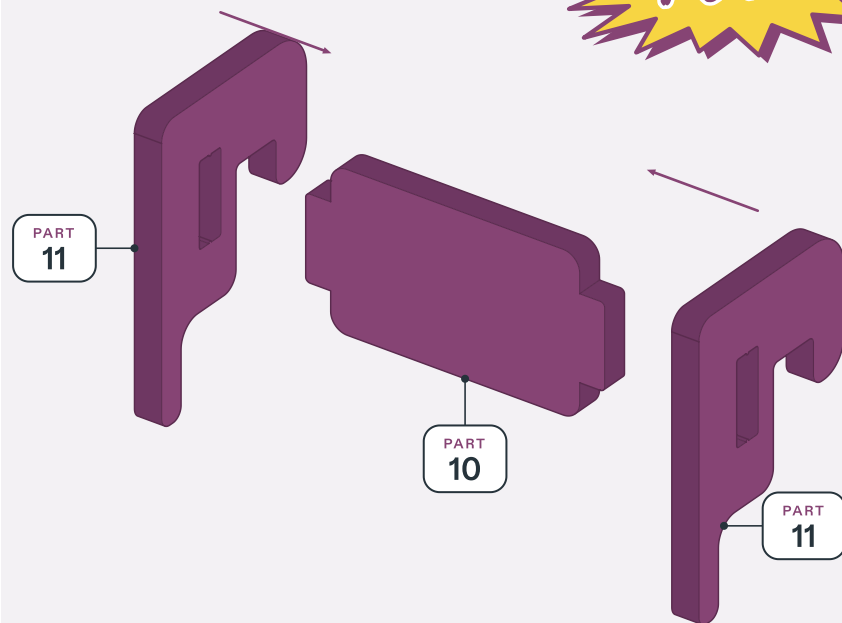


J

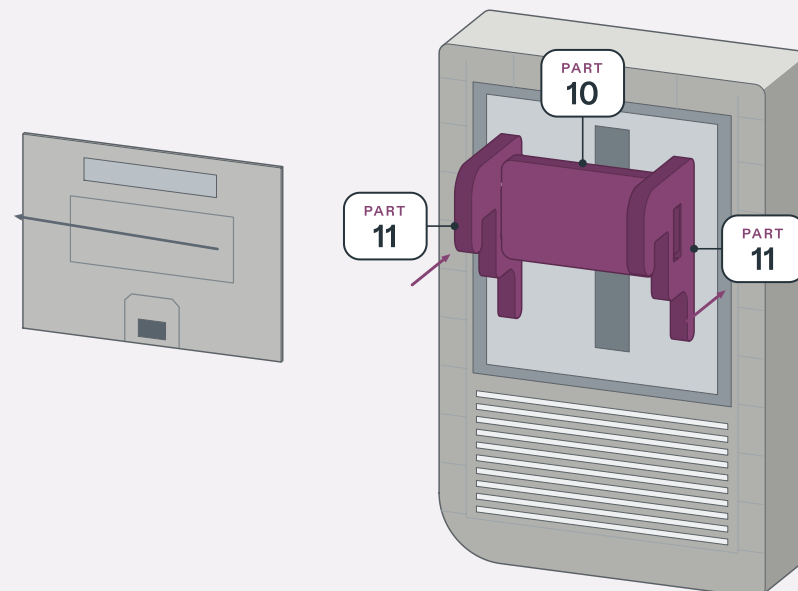 


K

 CLICK!

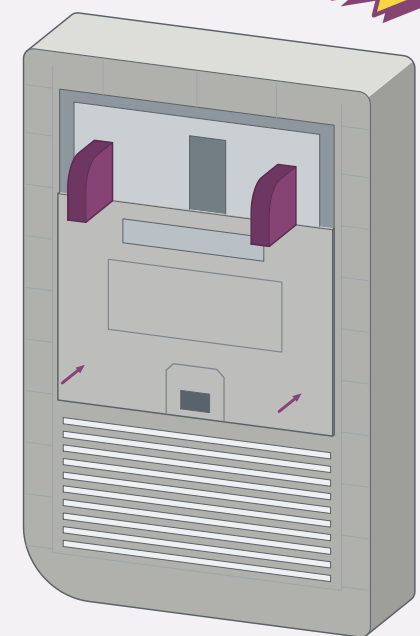


NINTH PANEL ASSEMBLY

 
L

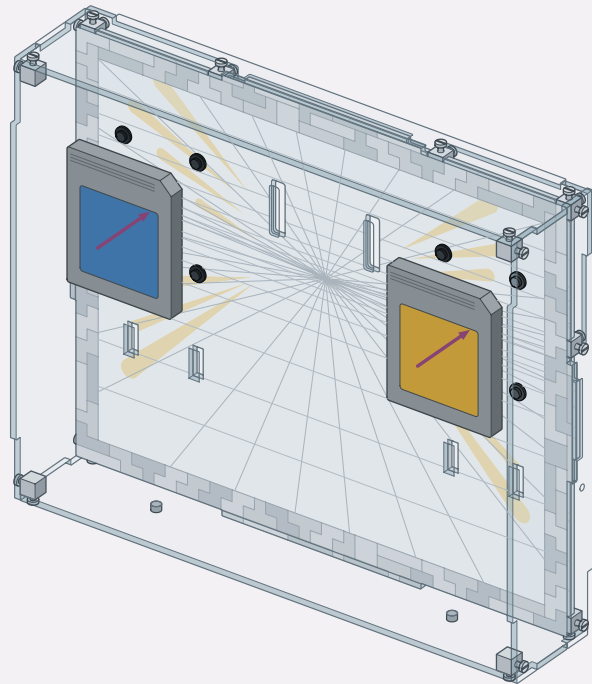

M

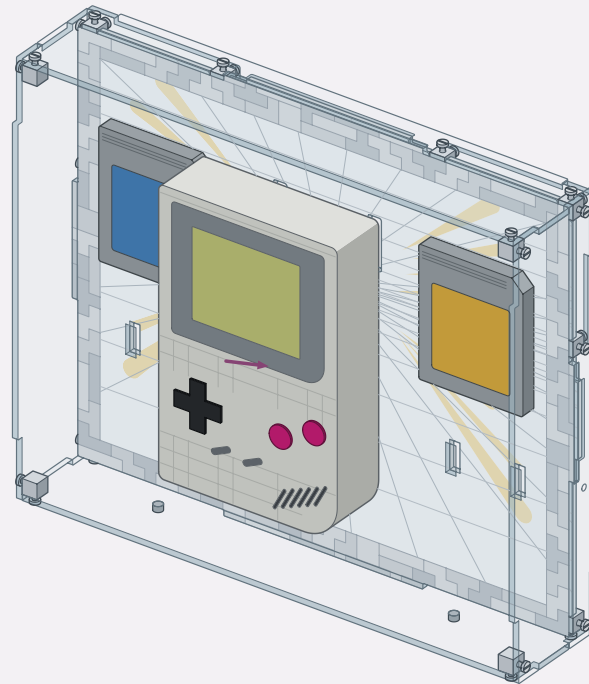 


N

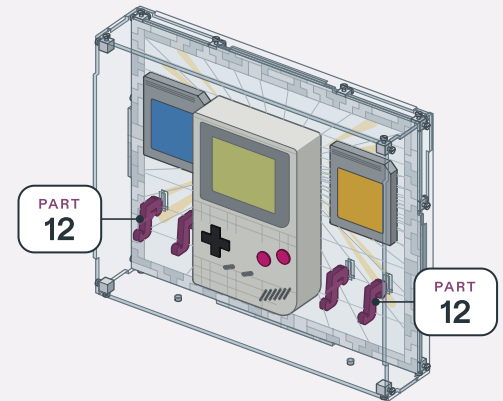 


Part 12

 
4x

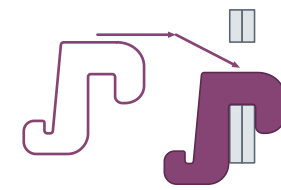

O

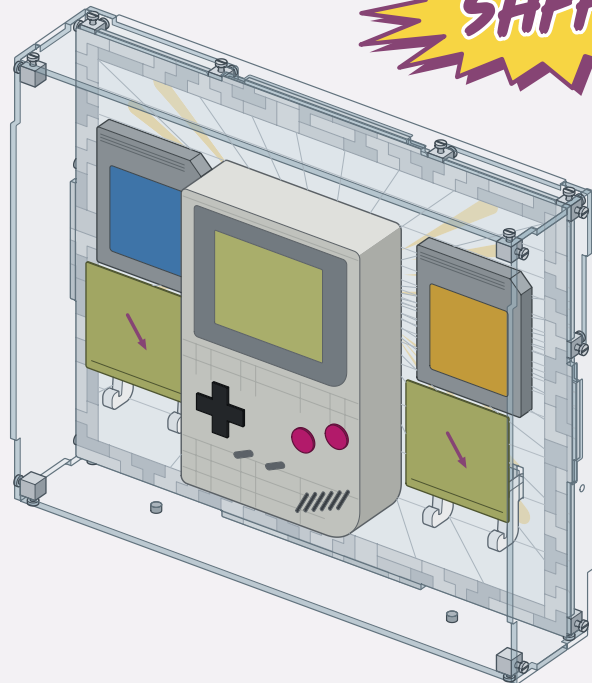 


P

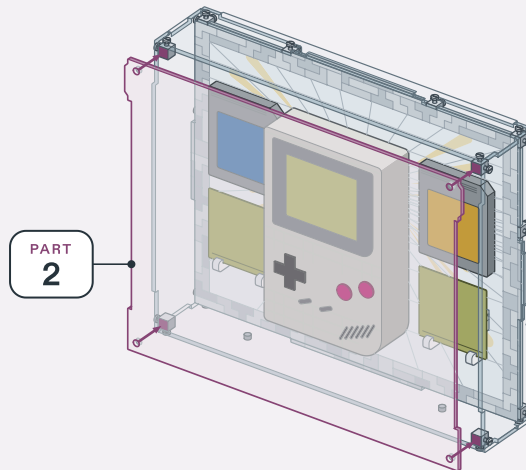 


TIP

Align the four pre-fitted magnets with the flat cube faces. Fit gently; no screws here.

 Magnets 4x

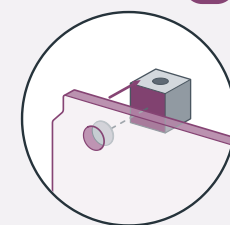


Q

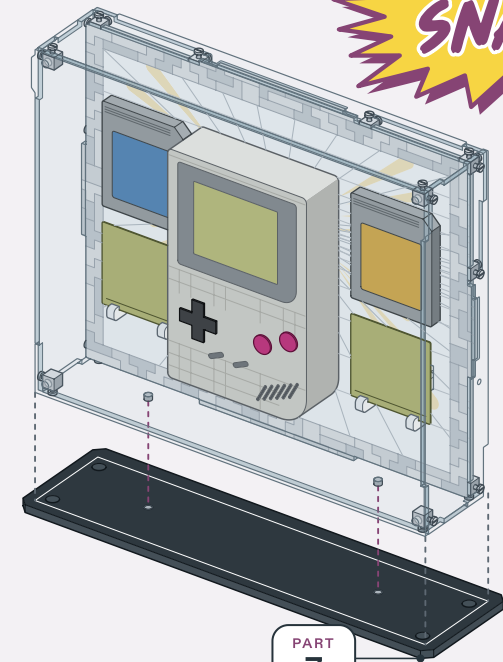 

PART 7

 White outline up / feet underneath

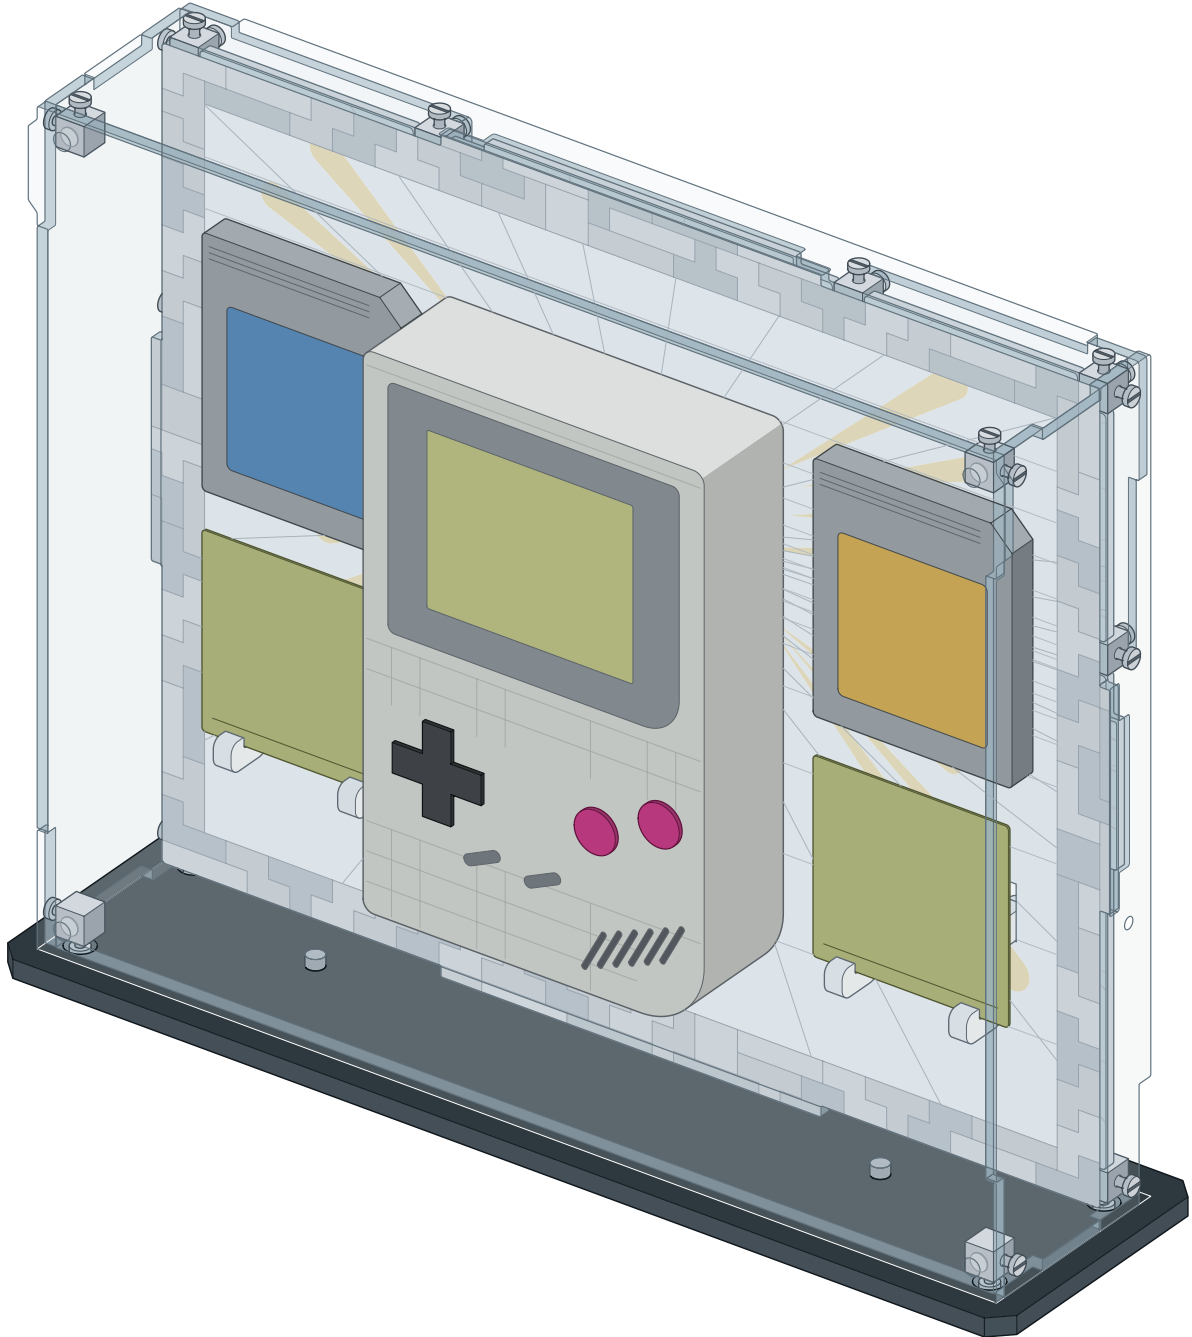

For LEGO® set 72046

INSTRUCTIONS

Scan, then type your set number.

