 


Display case for LEGO® set 21371

 
1

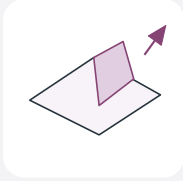

CHECK FOR FILM

Check both sides of every part. Remove any clear or coloured protective film before assembly.

2

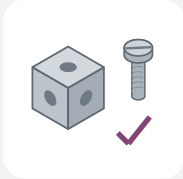

CHECK YOUR PARTS

Match all the pieces to the parts sheet before you start.

 
3



GENTLE TIGHTENING

Use a slotted (flat-head) hand screwdriver, not included. Start screws loosely. Do not over-tighten.


4

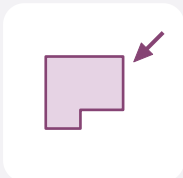

FOLLOW THE PURPLE

Purple shows the part being added or featured in the step.

 5

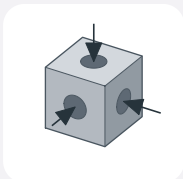

POINT THE HOLES OUT

Cube holes face the adjoining panels. Top cubes also need a hole facing up for the lid. Lower cubes have their spare hole facing down.

BEFORE YOU START

- Printed artwork is permanent. Do not peel or scrape the colour or white backing.
- Rear scenery faces into the case; base scenery faces up. Magnets are already fitted.
- Lift film gently with a fingernail. No sharp tools. Part numbers identify pieces; letters show the order.



Part 1

Front panel


1x



Part 2

Printed rear panel

 
1x

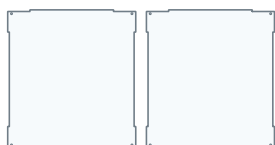

Part 3 / 4

Side panels: use either

 
2x

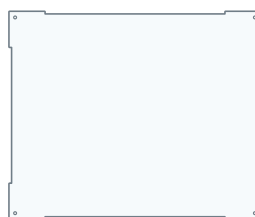

Part 5

Lid

 1x

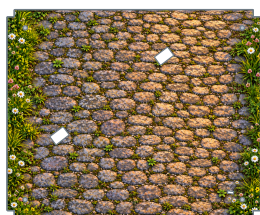

Part 6

Printed clear add-on

1x



Part 7

Black lower base


1x



Part 8

Sign post

 
1x

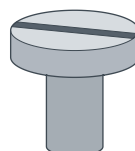

Part 9

Slotted screws

 
20x

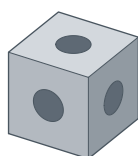

Part 10

Silver cubes

 8x

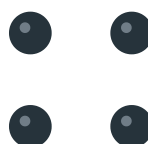

Part 11

Corner feet

4x

8 magnets are already fitted: four in each base. Leave them in place.

 
The four feet are supplied loose. All 20 screws are the same.

Artwork is shown lightly in assembly drawings so the fixings remain clear.

NINTH PANEL ASSEMBLY


A Fit the feet underneath

Part 11 4x

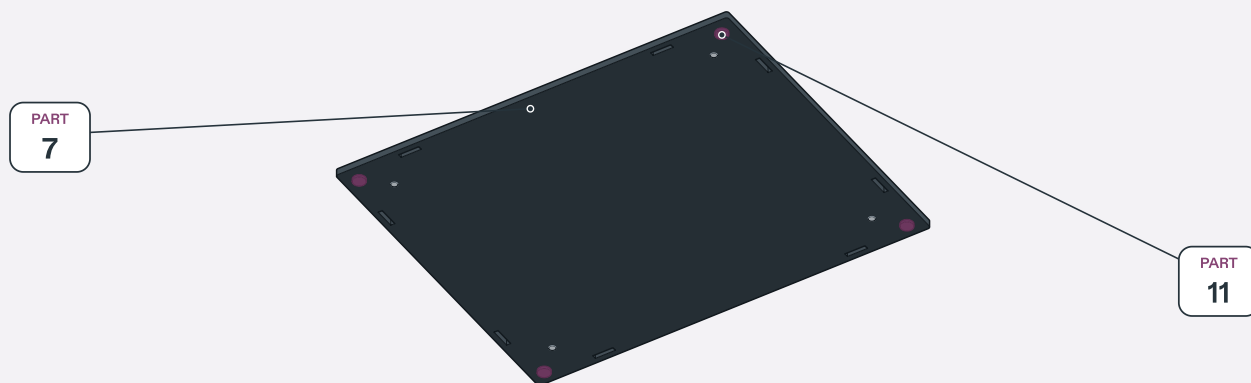

Turn the black base over. Stick one foot near each corner, keeping every hole and slot clear. Turn it back over.

 B Join the two bases


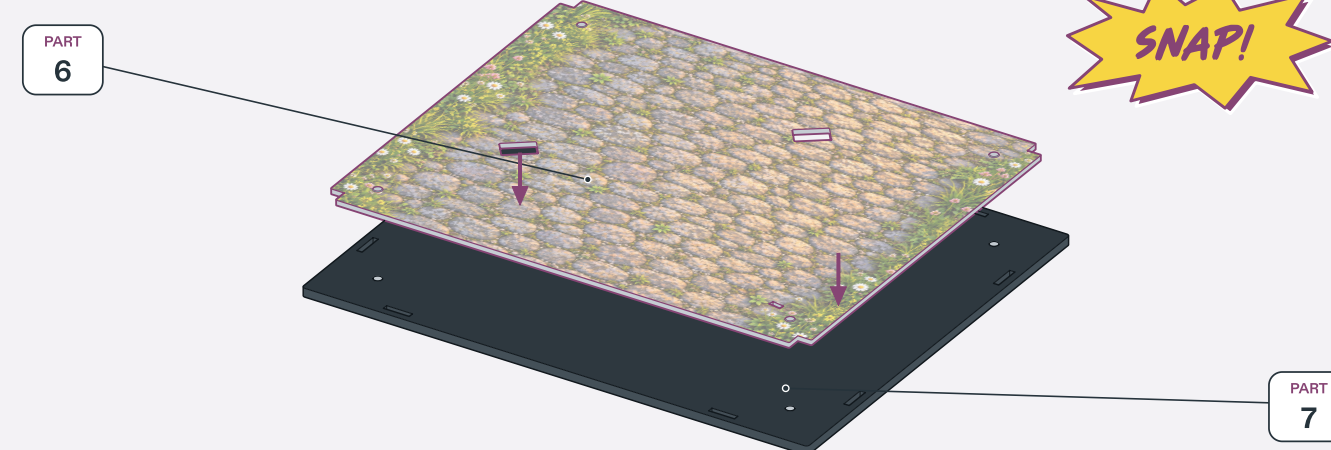


Scenery up. Match the four magnetic corners. Keep the joined base on the table for assembly.


C Prepare the front

Part 9 4x

  
Part 10 4x

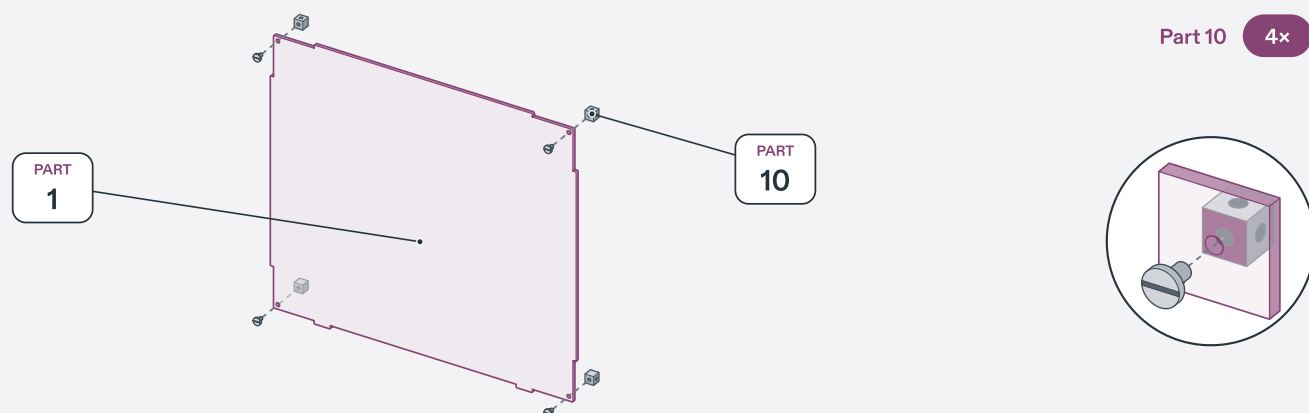


TOP LEFT

 

TOP RIGHT

 

BOTTOM LEFT

 

BOTTOM RIGHT

 
 
Top holes face up. Bottom holes face down. Left/right viewed from the front.

Cubes inside; screw heads outside. Leave the screws loose.


D Prepare the printed rear

Part 9 4x


Part 10 4x

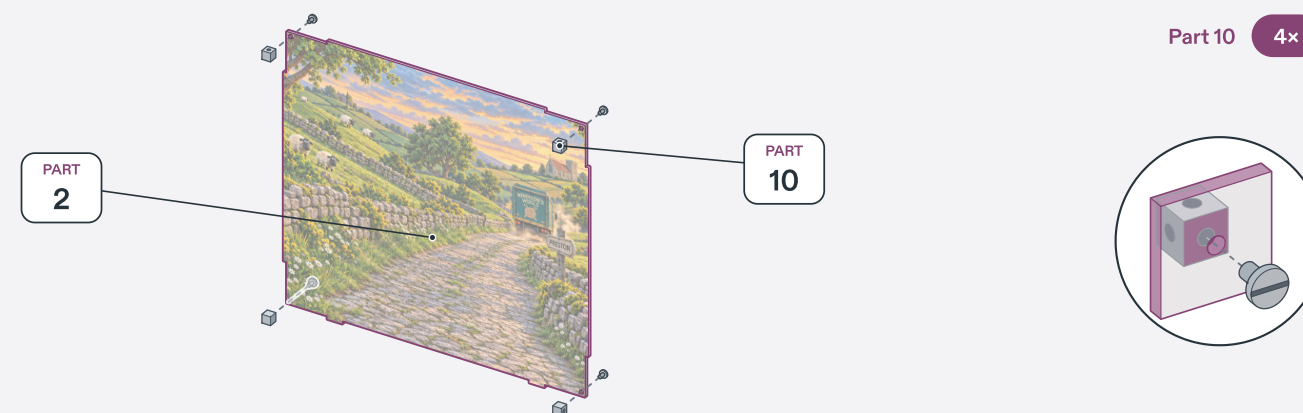


TOP LEFT

 

TOP RIGHT

 

BOTTOM LEFT

 

BOTTOM RIGHT

 
Top holes face up. Bottom holes face down. Left/right viewed from the front.

Cubes inside; screw heads outside. Leave the screws loose.

NINTH PANEL ASSEMBLY

E Seat the front and both sides


Part 9 4x

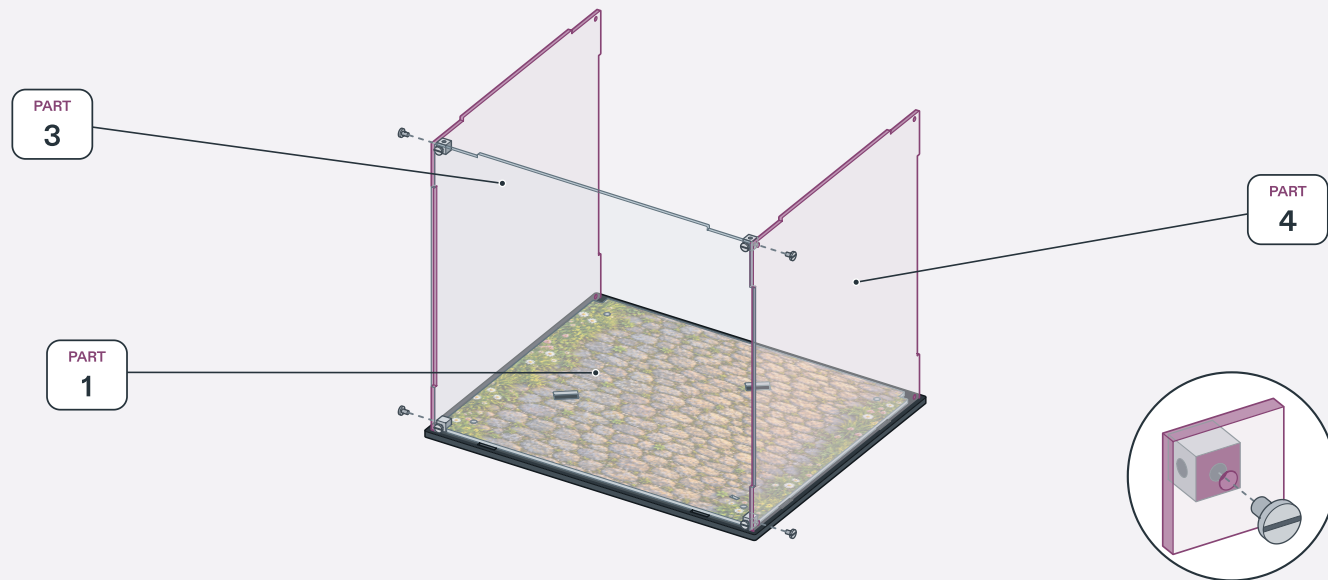

Seat each panel's two bottom tabs in the base slots. Fit two side screws on each side, loosely.

F Add the prepared rear

 
Part 9 4x

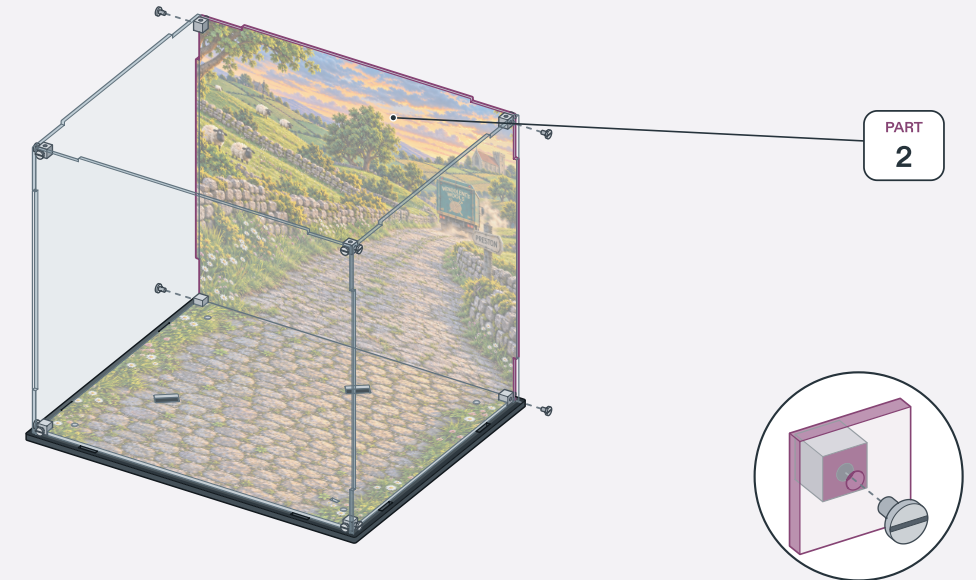

Scenery faces inside. Seat the rear tabs, align the joints, then fit two more side screws on each side.


G Fit the lid

 Part 9 4x

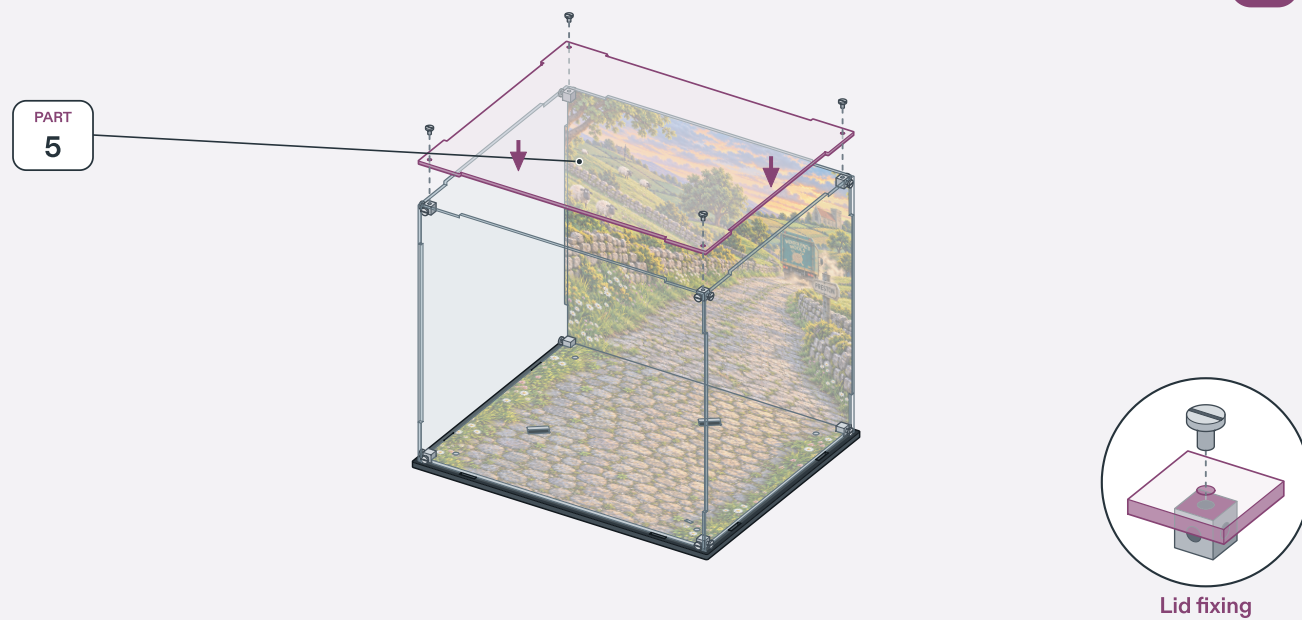

Lower the lid onto the tabs and add four screws. Check the joints, then gently tighten all 20 screws.

 H Lift the empty case off

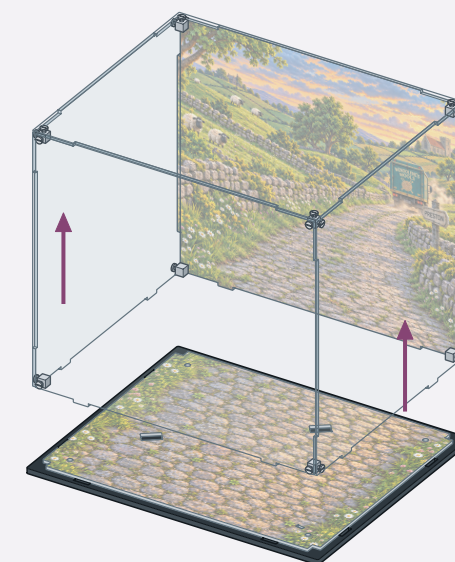

Hold both sides and lift straight up. Keep the base on the table. Add the model only after the empty case is removed.

 
NINTH PANEL ASSEMBLY

I Fit the sign post



Push the wooden post into the front-right slot, with the sign facing forward. Keep it straight and press gently.


J Place the model

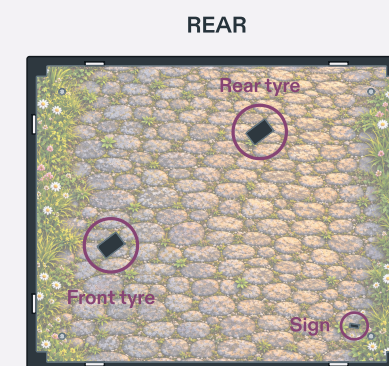

FRONT
Top view - scenery up

Rest the motorcycle tyres over their two locating openings. The tyres and sidecar stay supported on the printed base.

 K Lower the case into the base

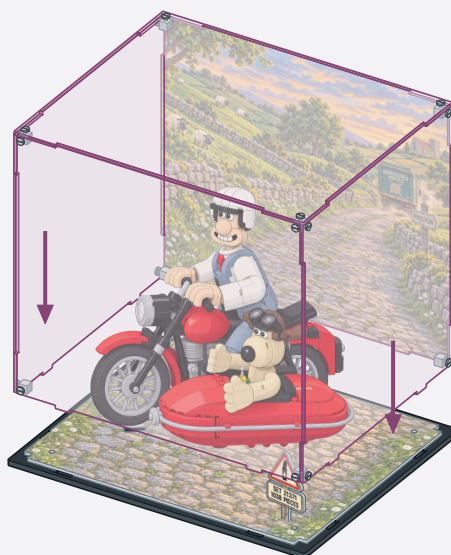

SLOT!

Hold both sides. Keep clear of Wallace, Gromit and the sign. Lower every bottom tab into its matching base slot.

L Check the finished case



- ✓ 20 screws gently tightened
- ✓ All bottom tabs seated
- ✓ Four feet stable underneath
- ✓ Tyres and sign supported

Move the complete display by supporting the base with both hands. Do not carry it by the lid.

NINTH PANEL CASE CLOSED.



For LEGO® set 21371

**NINTH
PANEL**
Case closed.

INSTRUCTIONS

Scan, then type your set number.



LEGO® is a trademark of the LEGO® Group, which does not sponsor or endorse this product.