
THE NINTH PANEL RULES


Display case for LEGO® set 21371

1 CHECK FOR FILM

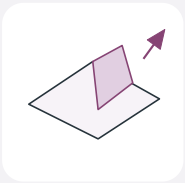

Check both sides of every part. Remove any clear or coloured protective film before assembly.

2 CHECK YOUR PARTS

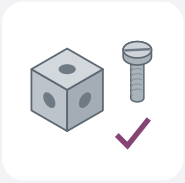


Match all the pieces to the parts sheet before you start.

3 GENTLE TIGHTENING




Use a slotted (flat-head) hand screwdriver, not included. Start screws loosely. Do not over-tighten.

4 FOLLOW THE PURPLE

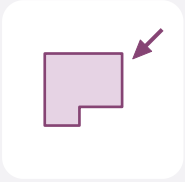

Purple shows the part being added or featured in the step.

5 ANY CUBE, ANY CORNER

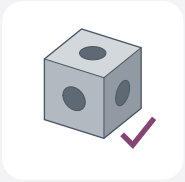


Every cube has a hole in each of its six faces. Any cube fits any corner, any way round. Some holes stay empty.

BEFORE YOU START

- Printed artwork is permanent. Do not peel or scrape the colour or white backing.
- Rear scenery faces into the case; base scenery faces up. Magnets are already fitted.
- Lift film gently with a fingernail. No sharp tools. Part numbers identify pieces; letters show the order.

CHECK YOUR PARTS

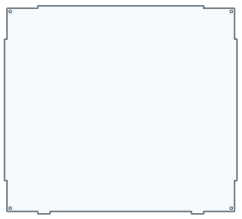

Part 1

Front panel


1×



Part 2

Printed rear panel

1×

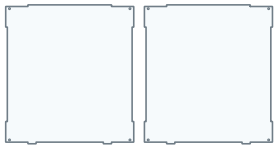

Part 3 / 4

Side panels: use either

2×



Part 5

Lid

1×



Part 6

Printed clear add-on

1×



Part 7

Black lower base


1×



Part 8

Sign post


1×

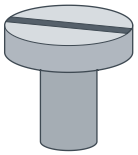

Part 9

Slotted screws


20×

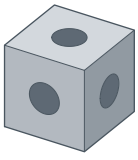

Part 10

Silver cubes

8×

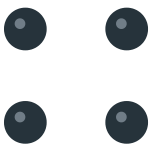

Part 11

Corner feet

4×

8 magnets are already fitted: four in each base. Leave them in place.


The four feet are supplied loose. All 20 screws are the same.

Artwork is shown lightly in assembly drawings so the fixings remain clear.

NINTH PANEL ASSEMBLY


A Fit the feet underneath

Part 11 4×

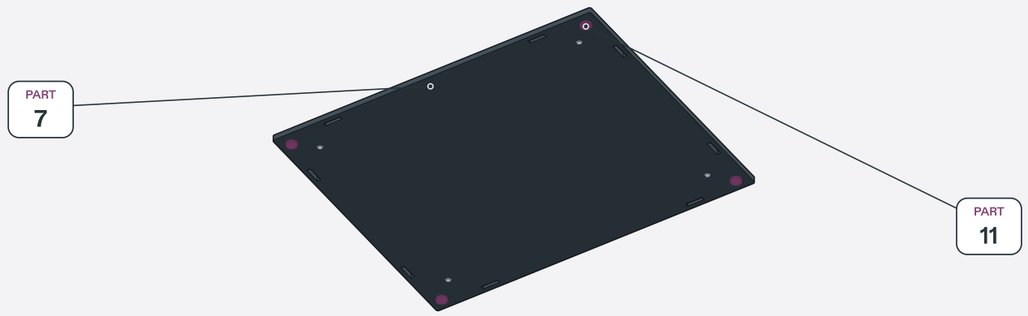

Turn the black base over. Stick one foot near each corner, keeping every hole and slot clear. Turn it back over.

B Join the two bases

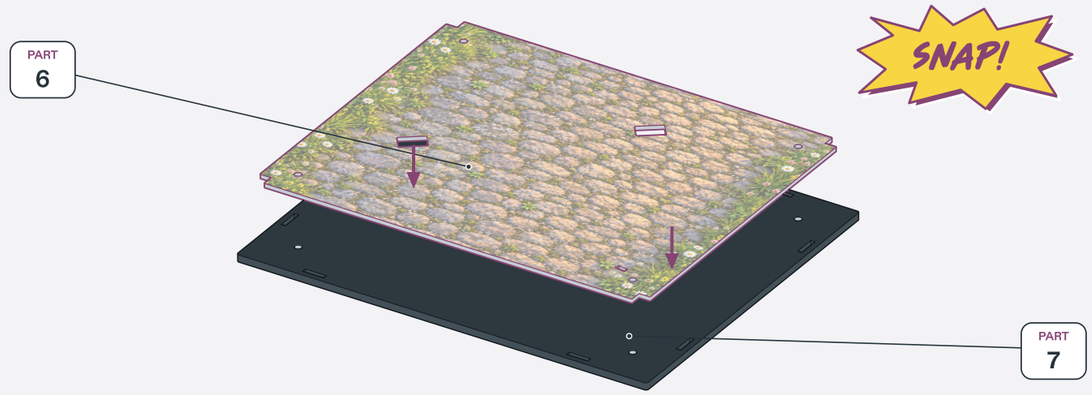



Scenery up. Match the four magnetic corners. Keep the joined base on the table for assembly.

C Prepare the front

Part 9 4×

Part 10 4×

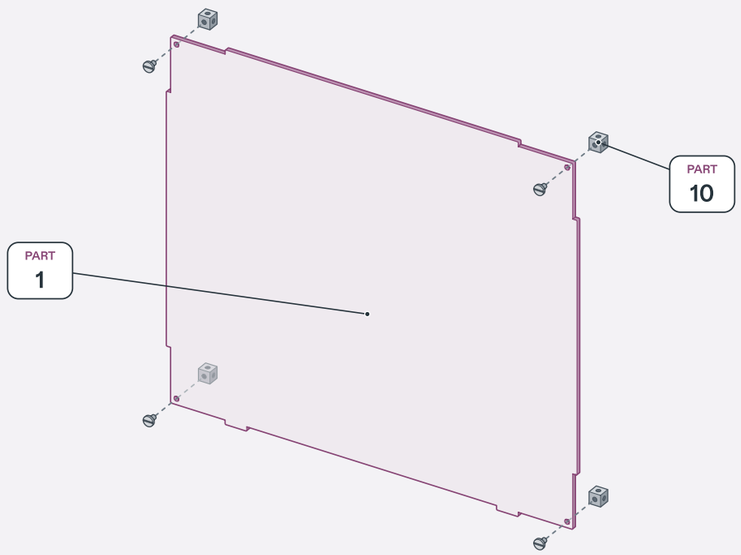

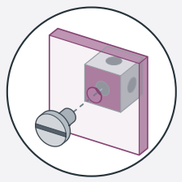



Cubes inside; screw heads outside. Any cube fits any corner. Leave the screws loose.

D Prepare the printed rear

Part 9 4×

Part 10 4×

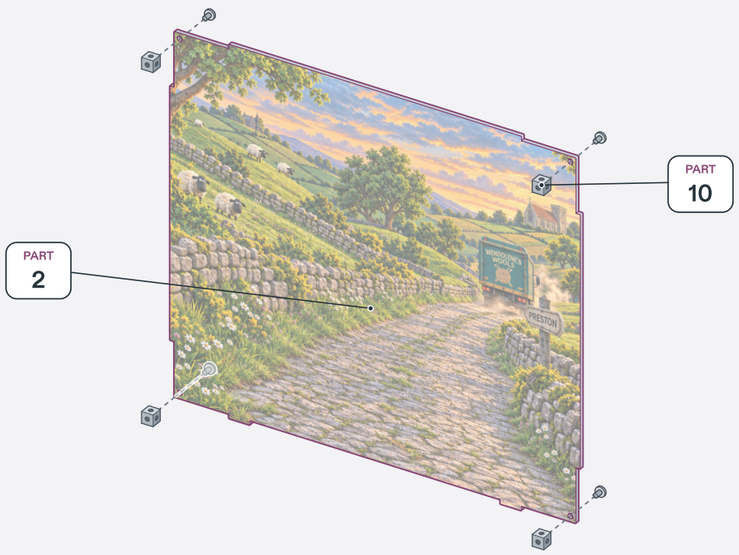


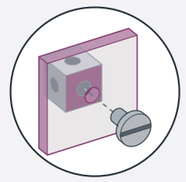

Cubes inside; screw heads outside. Any cube fits any corner. Leave the screws loose.

E Seat the front and both sides


Part 9 4×

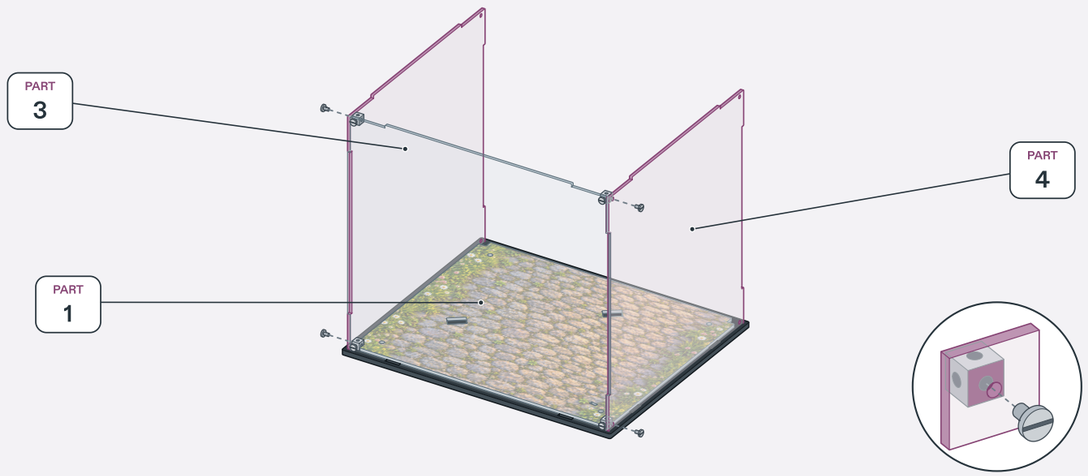

Seat each panel's two bottom tabs in the base slots. Fit two side screws on each side, loosely.

F Add the prepared rear


Part 9 4×

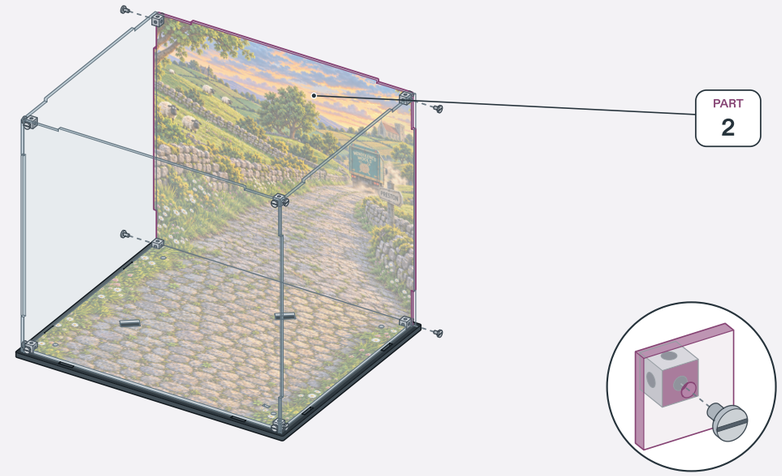


Scenery faces inside. Seat the rear tabs, align the joints, then fit two more side screws on each side.

G Fit the lid

Part 9 4×

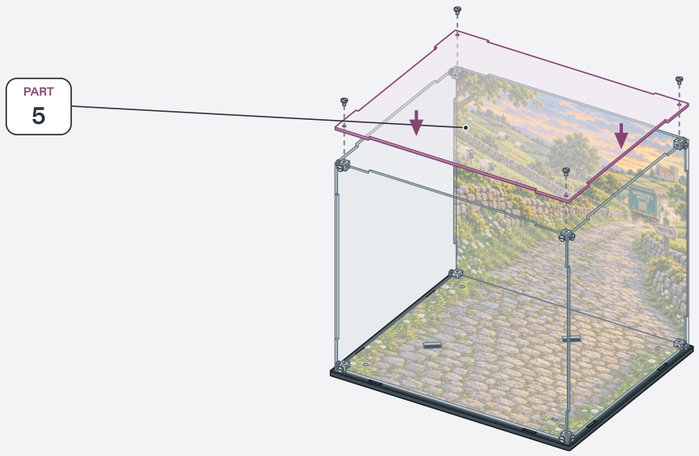


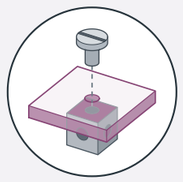

Lid fixing


Lower the lid onto the tabs and add four screws. Check the joints, then gently tighten all 20 screws.

H Lift the empty case off

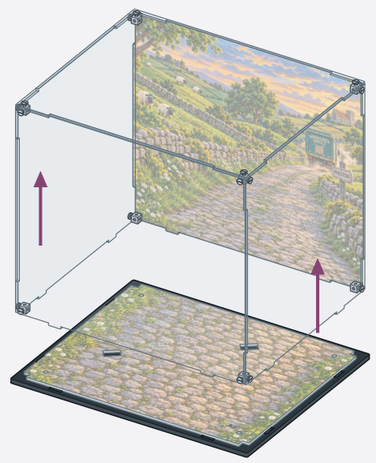

Hold both sides and lift straight up. Keep the base on the table. Add the model only after the empty case is removed.


I Fit the sign post

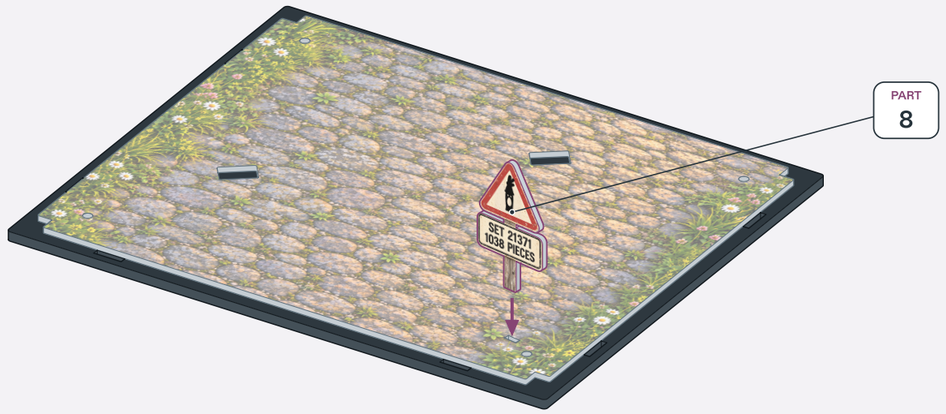

Push the wooden post into the front-right slot, with the sign facing forward. Keep it straight and press gently.

J Place the model




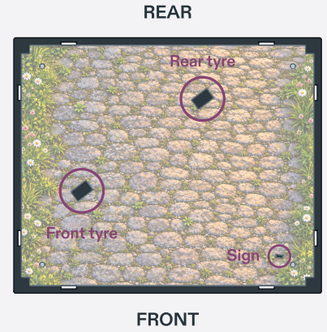

Top view - scenery up

Rest the motorcycle tyres over their two locating openings. The tyres and sidecar stay supported on the printed base.

K Lower the case into the base

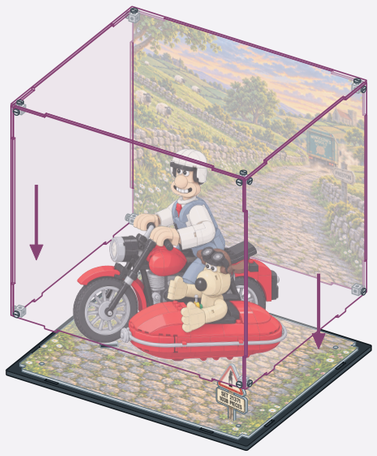



Hold both sides. Keep clear of Wallace, Gromit and the sign. Lower every bottom tab into its matching base slot.

L Check the finished case



- [x] 20 screws gently tightened
- [x] All bottom tabs seated
- [x] Four feet stable underneath
- [x] Tyres and sign supported

Move the complete display by supporting the base with both hands. Do not carry it by the lid.

NINTH PANEL

CASE CLOSED.



For LEGO® set 21371

NINTH PANEL
Case closed.

CRACKING CODE, GROMIT!

Scan here for digital instructions.

LEGO® is a trademark of the LEGO® Group, which does not sponsor or endorse this product.