
THE NINTH PANEL RULES


Display case for LEGO® set 21369

1 CHECK FOR FILM

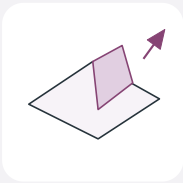

Check both sides of every part. Remove any clear or coloured protective film before assembly.

2 CHECK YOUR PARTS

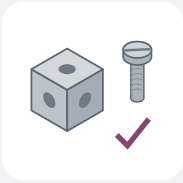


Match all the pieces to the parts sheet before you start.

3 GENTLE TIGHTENING



Use a slotted (flat-head) hand screwdriver, not included. Start screws loosely. Do not over-tighten.

4 FOLLOW THE PURPLE

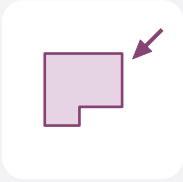

Purple shows the part being added or featured in the step.

5 THREE HOLES PER CUBE




Each cube has holes in three faces. Point them outwards, to the rear, and up or down (page 2). Some holes stay empty.

BEFORE YOU START

- Printed artwork is permanent. Do not peel or scrape the colour or white backing.
- Rear scenery faces into the case; base and ledge scenery face up. Magnets and studs are already fitted: leave them in place.
- Lift film gently with a fingernail. No sharp tools. Part numbers identify pieces; letters show the order.

CHECK YOUR PARTS

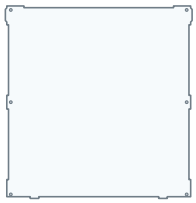

Part 1

Magnetic front


1×



Part 2

Printed rear panel

1×

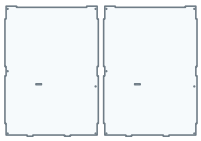

Part 3 / 4

Side panels: use either

2×



Part 5

Lid

1×



Part 6

Printed base

1×



Part 7

Black base

1×



Part 8

Printed middle ledge


1×



Part 9

Bee jar sign


1×



Part 10

Slotted screws


24×

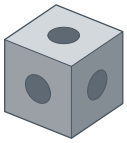

Part 11

Steel cubes

12×

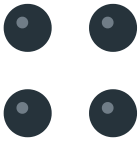

Part 12


Feet

4×


Already fitted

12 magnets and 6 black studs. Leave them in place.

WHICH WAY THE CUBES FACE

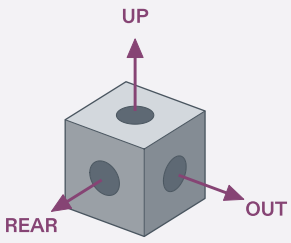

Top and middle cubes

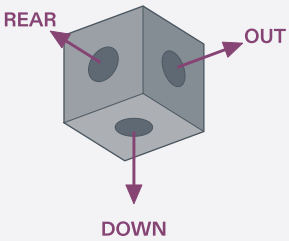

Bottom cubes

Each cube has holes in three neighbouring faces. Point the holes outwards (towards the side panel), to the rear, and up or down. The six front cubes then show a smooth face to the magnetic front. Some holes stay empty.


The four feet are supplied loose. The bee jar is in the small brown envelope. All 24 screws are the same.

Artwork is shown lightly in assembly drawings so the fixings remain clear.

NINTH PANEL ASSEMBLY


A Fit the feet underneath

Part 12 4×

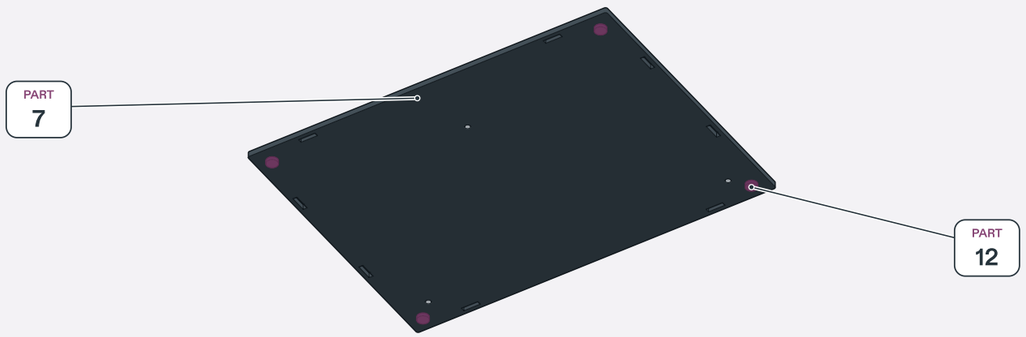

Turn the black base over. Stick one silicone foot near each corner, on clean acrylic and clear of the slots. Turn the base back over.

B Join the two bases

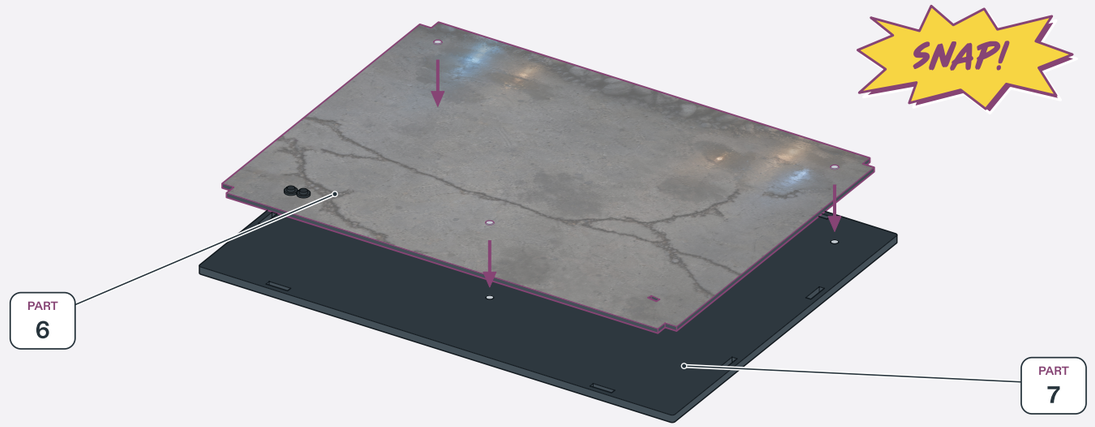



Place the printed base on the black base, scenery facing up. Match the three magnetic pairs and keep the joined base on the table.

C Prepare the left side

Part 10 6×

Part 11 6×

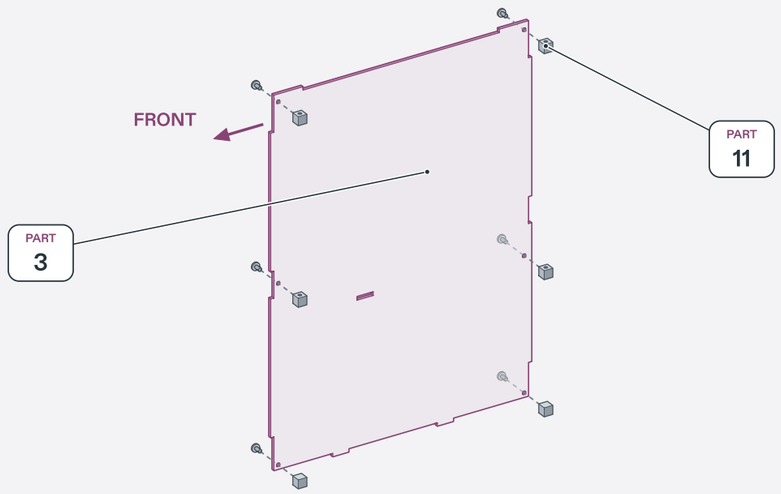

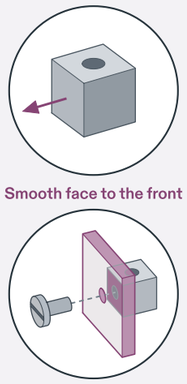



Fit six cubes to the inside of the left side panel. Start all six side screws loosely. Point the smooth faces of the three front cubes towards the front panel.

D Prepare the right side

Part 10 6×

Part 11 6×

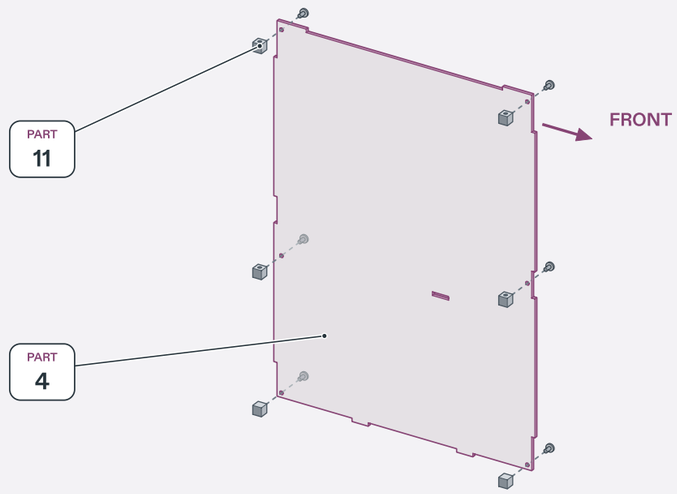

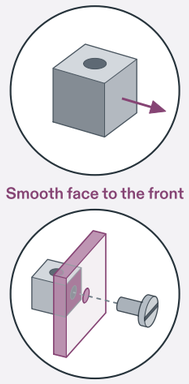



Fit six cubes to the inside of the right side panel. Start all six side screws loosely. Point the smooth faces of the three front cubes towards the front panel.

E Add the printed rear

Part 10 3×


View from behind

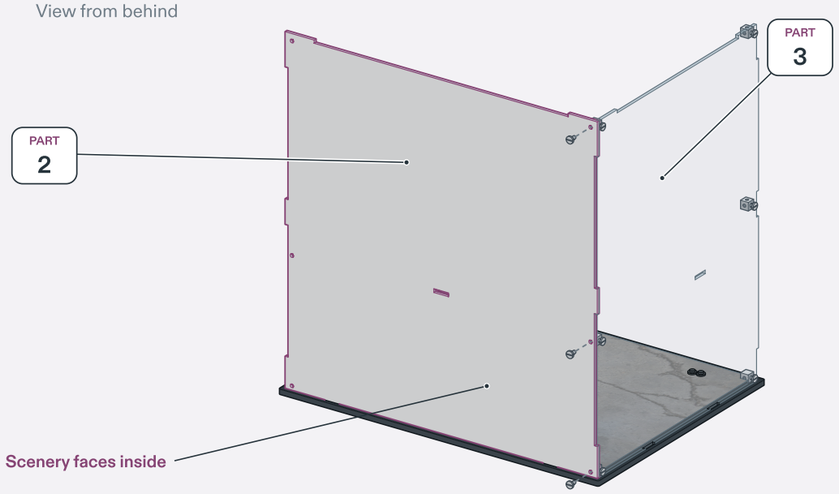

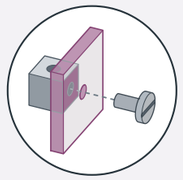

Seat the left side and rear panel tabs in their base slots. Keep the rear scenery facing inside. Join the rear to the three left rear cubes with three screws. Support both panels while the case is open.

F Locate the middle ledge

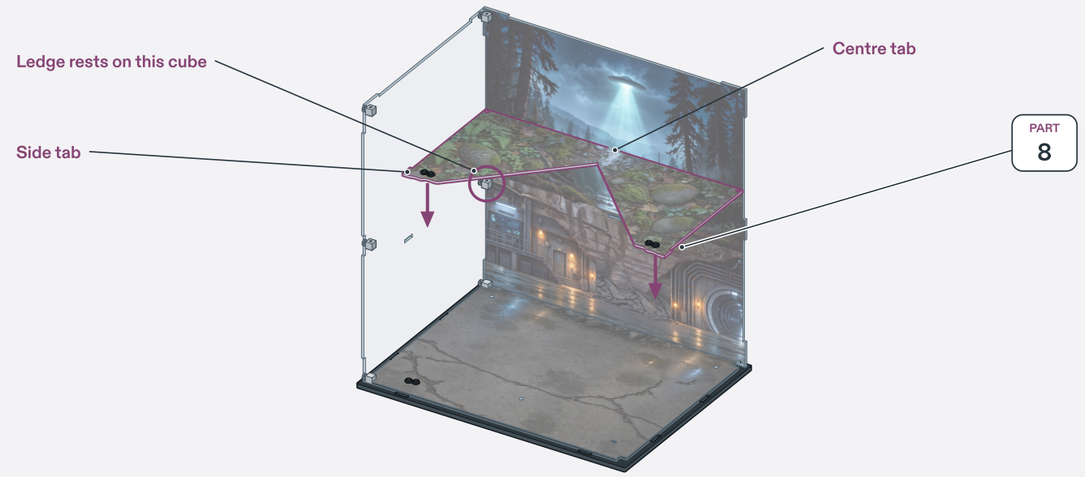



Keep the forest scenery facing up. Engage the rear centre tab and the left side tab. Rest the rear of the ledge on its supporting cube.

G Add the right side

Part 10 3×

View from behind

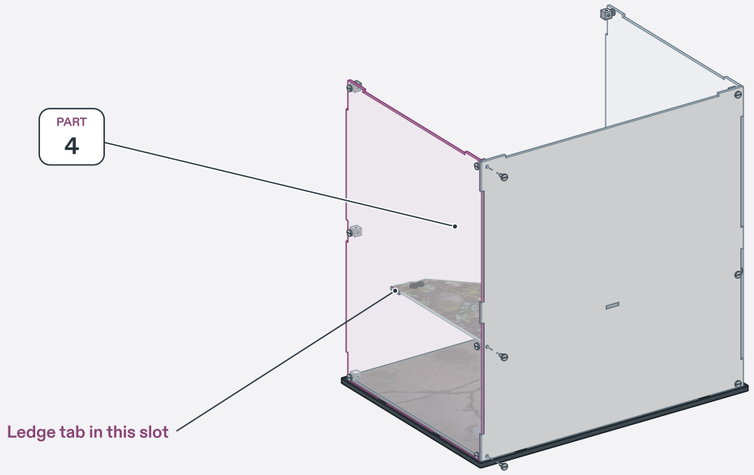


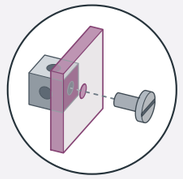


Engage the ledge tab with the right side slot, then seat the right side in the base. Join the rear to the three right rear cubes with three screws.

H Secure the middle ledge

Part 10 2×

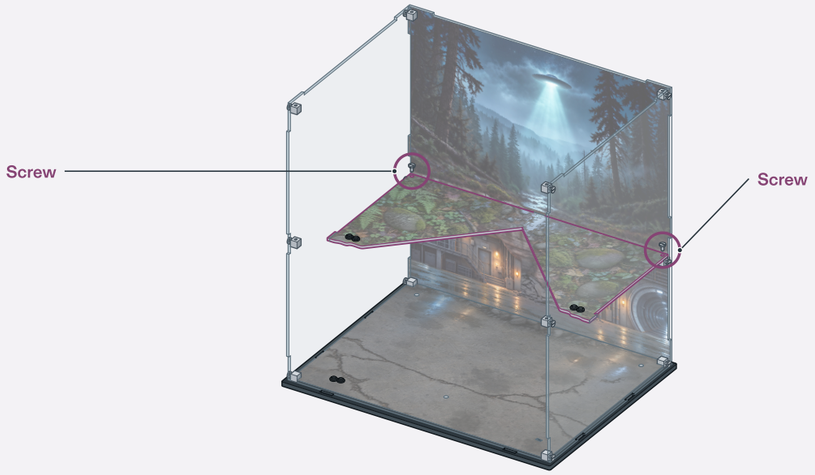

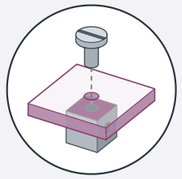

Add the two screws down through the rear corners of the ledge into their supporting cubes. Keep the front opening clear.

I Place the model



Front and lid off

With the front and lid still off, position the LEGO model on the printed base, within the middle ledge opening. Keep the forest floor, UFO and surrounding scenery clear of the acrylic.

J Add the jar and minifigures




Insert the bee jar tab into the angled front-right slot. Keep the bee label facing forward and slightly left. Place one minifigure on each two-stud pair, supporting the panel underneath as you press.

K Fit the lid


Part 10 4×



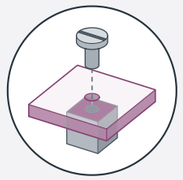

Lower the lid onto the joints and add four screws. Check that every tab is seated, then gently tighten all 24 screws by hand. No screws go in the magnetic front or through the black base.

L Fit the magnetic front

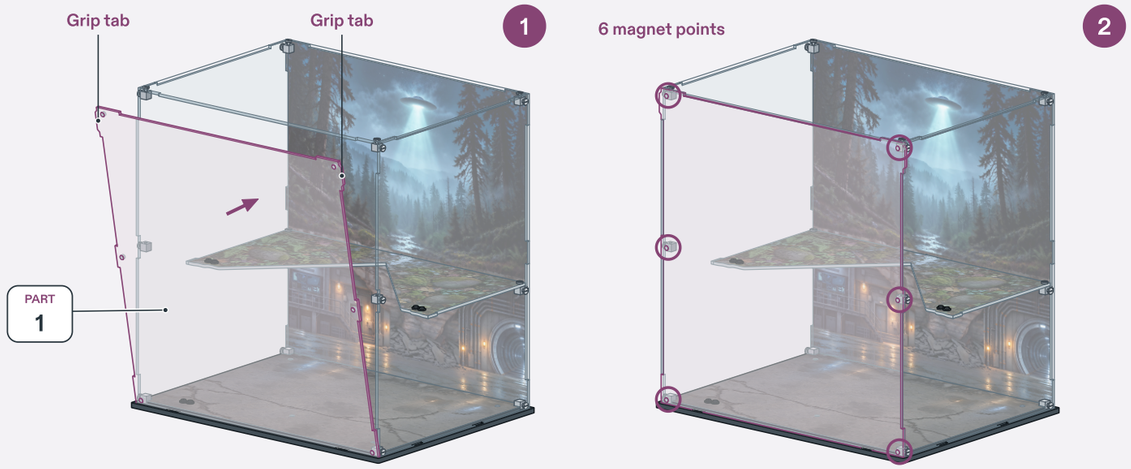

Lower the front panel's bottom tabs into the base slots. Bring the top gently towards the case until the magnets meet the smooth cube faces.

Check the finished case



- ✓ 24 screws gently tightened
- ✓ All bottom tabs seated
- ✓ Front held by six magnets
- ✓ Jar, model and three minifigures in place

Check the jar, model and all three minifigures are seated correctly. Move the display by supporting the black base with both hands.

OPENING THE FRONT



Hold the upper grip tabs and gently pull the top of the front panel away from the case. With the top clear, lift the panel vertically to withdraw its bottom tabs from the base. Refit bottom tabs first, then bring the top in to engage the magnets.

NINTH PANEL

CASE CLOSED.



For LEGO® set 21369

NINTH PANEL
Case closed.

THE TRUTH IS ONLINE.

Scan here for digital instructions.

LEGO® is a trademark of the LEGO® Group, which does not sponsor or endorse this product.