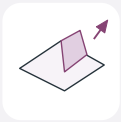
NINTH PANEL — THE NINTH PANEL RULES

Crystal Clear Display Window for IKEA KALLAX
Adult assembly. About ten minutes for each window.

1 

CHECK FOR FILM

Peel the protective film from both faces of every panel. Use a fingernail, not a sharp tool.

2 

CHECK YOUR PARTS

Match all the pieces to the parts list below before you start.

3 

GENTLE TIGHTENING


Use a small slotted (flat-head) hand screwdriver, not included. Start every screw by hand. Stop when firm: acrylic can crack under force.

4 


FOLLOW THE PURPLE

Purple shows the part being added or featured in the step.


CHECK YOUR PARTS

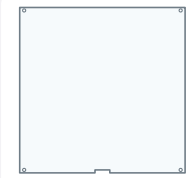


Part 1
Front panel
1×

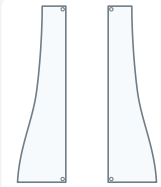

Part 2
Side panels: both the same
2×

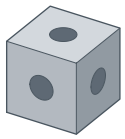

Part 3
Silver cubes
4×

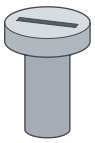

Part 4
Slotted screws
8×



Part 5
Pull tab
1×

This list is for one window. A pack of two or more has one full set for each window. The panels are clear acrylic, 3 mm thick. The silver cubes and screws are stainless steel. Each silver cube takes two screws. Any other holes stay empty.

FIT, CARE AND SAFETY

Fit

Made for one standard IKEA KALLAX cube. The window fills the whole opening, so it cannot share the KALLAX cube with a drawer, basket or another insert. If your shelf is older or has been changed, measure the opening first and email the sizes to support@ninthpanel.com. Nothing is screwed or stuck to your shelf.

Care

Clean with a soft, dry microfibre cloth. For the best shine and static protection, we recommend Vuplex with a screen wipe grade electrical cloth. Do not use solvents or abrasive pads. Keep the window away from direct heat.

Safety


Adult assembly. Small metal parts: keep them away from children and pets. Stop using the window if a panel or silver cube is damaged or loose. Do not let children climb the shelving or pull the window forward. Follow IKEA's wall anchoring guidance.

IKEA and KALLAX are trademarks of Inter IKEA Systems B.V. Ninth Panel is not affiliated with IKEA.

NINTH PANEL ASSEMBLY


A Lay out the panels

Lay the panels on a clean, soft surface, with the front panel in the middle. The side panels are the same: turn one over so both straight edges face the front panel. Keep the notch and the wide ends at the bottom.

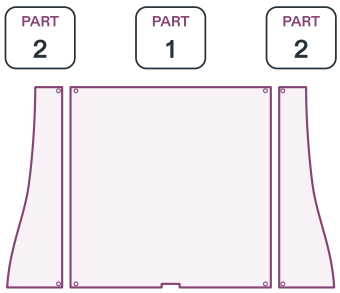


B Fit the silver cubes to the front

Stand the front panel up, with the notch at the bottom. Hold a silver cube behind each corner hole. Put a screw through the panel into each silver cube. Turn it two or three times by hand. Leave it loose.

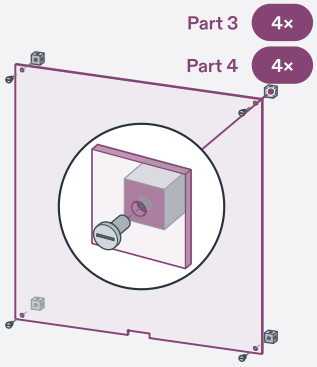


C Add the side panels

Hold a side panel against each pair of silver cubes, with the wide end at the bottom. Put a screw through the side panel into each silver cube. Start each screw by hand. Leave them loose.

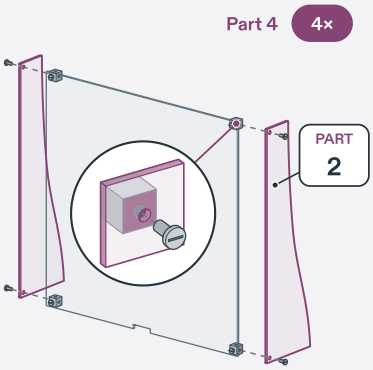


D Square it up and tighten

Check the window is square. Tighten the eight screws evenly, a little at a time. Stop when each screw is firm. Do not over-tighten: acrylic can crack under force.

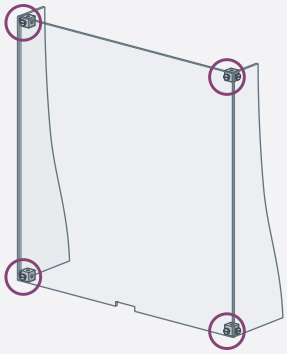


E Slide it into your KALLAX

To close the back as well, go to step G first. Hold the window by its sides. Slide it straight into one KALLAX cube until it sits snugly, with the front panel level with the front of the shelf.

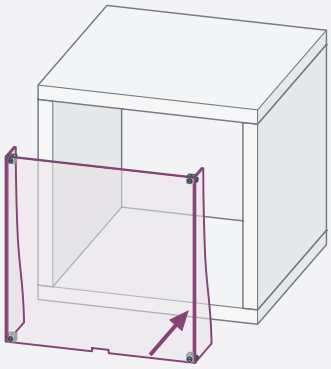

F Change the display


Hook the pull tab under the front panel, at the notch. Draw the window forward. Change your display, then slide the window back in.

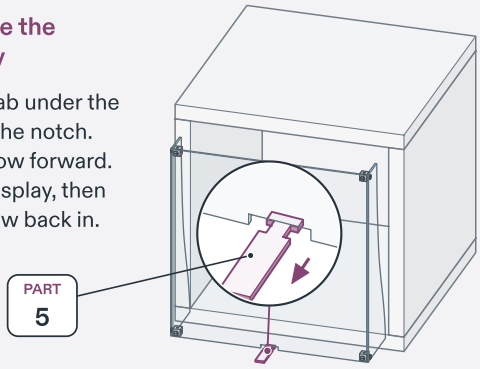

G Close the back too


For a KALLAX cube closed on every side, build two windows with steps A to D. Do these three steps from the front, so you do not reach behind the shelf.

1

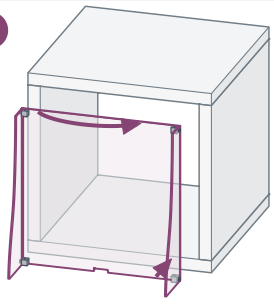


Turn the first window round, so the notch is at the back and the side panels point towards you. Slide it in until the panel is level with the back of the shelf.

2

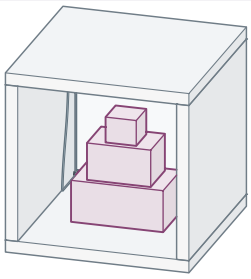

Put your build in the KALLAX cube.

3

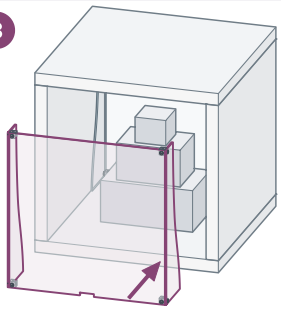

Slide the second window in until it sits snugly, with the front panel level with the front of the shelf.

FLAT PACK TO THE FUTURE.

Scan here for digital instructions.

Questions or a missing part?

Email support@ninthpanel.com with your order number.

ninthpanel.com

IKEA and KALLAX are trademarks of Inter IKEA Systems B.V. Ninth Panel is not affiliated with IKEA.